# Fitting Instructions: Threshold Plate



## Description of contents

- Aluminium threshold
- Aluminium snap cover
- Stainless Steel screws and plugs
- Fitting instructions
- Vinyl foot

#### Tools required for installation

- Tape measure
- Pencil or marker
- Saw (power or hand)
- Power drill
- Knife
- 4.5mm drill bit
- 6.0mm Masonry bit

### Other Integrity™ Architectural Seals include:

- Door Perimeter Seals
- Door Bottom Seals
- Automatic Door Bottom Seals
- Threshold Plates
- Brush Seals
- Magnetic Seals

Contact your nearest Kilargo office for further details.

# Installation detail: Threshold plate

It is not necessary to remove the door from the hinges.

Step 1	Remove the plate from the packaging and measure the door width, between jambs or door stops to determine the plate length required.
Step 2	Measure the threshold and mark with a pencil the desired length (and profile if cutting around the door stop).
Step 3	Pull back vinyl foot and cut with a knife. Cut through the threshold plate and cover using a saw.
Step 4	Position the plate on the door sill in required location.
Step 5	Using a power drill with a 4.5mm drill bit, create fixing holes in plate at the required positions.
Step 6	With the plate in position, mark hole centres on the floor. Using a masonry drill, create fixing holes. Clean away dust and insert supplied plastic plugs.
Step 7	Screw fix, then fit the snap on cover to hide screw heads.
Step 8	Where the threshold plate meets the door stop, sealant may be applied to prevent ingress of moisture.
Step 9	Check to ensure the door can open and close properly.
Note: For	effective operation, the IS4100 threshold plate requires a minimum of 12mm clearance

Note: For effective operation, the IS4100 threshold plate requires a minimum of 12mm clearance between the door and the floor.

## Important

Ensure that the installation of this product does not impede the opening or closing of the door.

## Note

Recommendations as to methods for use of materials and construction details are based on the experience and knowledge of Kilargo and are given in good faith as a general guide and service to designers, contractors and manufacturers. Kilargo reserves the right to make alterations or delete any installation detail without prior notice.





Literature Code: IS4100 05/12

# Integrity

Architectural Door Seals