# IFD44-LL Series: Plasterboard

## Installation Instructions:

Air-Transfer



Step 1	Position damper centrally in penetration aperture as per system drawing with temporary supports or packers.	
Step 2	en mounting angles or brackets to damper with steel self-drilling screws teel pop rivets and to the building element with appropriate mechanical igs as per system drawing.	
Step 3	Apply Kilargo Intumescent Mastic (supplied separately) to the gaps between the damper & building element. Ensure fill depth corresponds with those detailed in the system drawing.	
Step 4	Ensure product and certification labels are in a prominent position for easy identification during subsequent maintenance inspections.	
Step 5	Fix grille independently to the building element.	

### System Notes

- Grilles, louvres, vermin proof mesh, angles, brackets & fixings are to be supplied by others.
- Grille to be fixed independently to the building element and shall not be fixed to the fire damper.
- Kilargo Intumescent Fire Dampers shall be installed in accordance with this detail, including the use of Kilargo Intumescent Mastic and in accordance with the requirements of AS1682.2.
- Ensure convenient access is provided for visual inspection and cleaning as necessary.
- Fire damper insulation requirements are not required for shaft mounted fire damper as per AS 1668.1:2015 cl 3.2.3.1 (a).
- 2mm Minimum gap allowable between damper and aperture. For gaps between 2-5mm, a fillet of Kilargo Intumescent Mastic shall be applied.



with grille on one side
600 x 600 or 0.36 m2
-/120/-
FAS200229

System No.



WSW29 (a)

-/120/-

# IFD44-LL Series: Plasterboard

# Installation Instructions:

Air-Transfer - Modular

# U Channel

Step 1	Apply Kilargo Intumescent Mastic to the opposing module
Step 2	Align and bring modules together and mechanically fix together using U channels and steel self-drilling screws or steel pop rivets with 2 sets of screws at 150mm centres as per the modular system drawing on both sides
Step 3	Fix modular damper to aperture or casing as shown in the appropriate system drawing and installation instructions

30

## System Notes

- Fixings are to be supplied by others.
- Optional flat joining strips supplied at the time of order in lieu of U channel on request for air transfer systems only.





FRL