

Installation Instructions

Circular IFD (no steel sleeve) in concrete floor slab

- 1. Position & fasten mounting angles to slab using steel anchors (supplied by others) as detailed in the System Drawing.
- 2. Fit and position damper in aperture and fire stop any gaps between the damper and slab with Kilargo Intumescent Mastic (supplied separately). Ensure fill depth corresponds with those detailed in the System Drawing. Note: A maximum perimeter clearance of 25mm applies.
- **3.** If connecting ductwork, to slab ensure that an appropriate AS1682.2 compliant breakaway joint method is used.
- **4.** To prevent injury a load bearing grate is required (by others) in situations where installation is exposed or damper may be accessed by foot traffic
- **5.** Ensure convenient access is provided for visual inspection and cleaning as necessary.
- **6.** Ensure product and certification labels are in a prominent position for easy identification during subsequent maintenance inspections.

Notes

- Product must be fitted in accordance with this detail, including the use of Kilargo Intumescent Mastic to ensure compliance with Kilargo Fire Test Approval detailed.
- **2.** Fixing screws, masonry anchors and load bearing grate are to be supplied by others.

