
### Length:

## MULTIPLE

## Fitting Instructions: Frameless Glass Seal

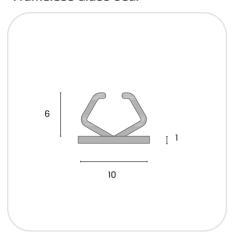

### Description of contents

- PVC Frameless Glass Seal
- Fitting instruction

#### Tools required for installation

- Tape measure
- Scissors / Side cutter
- Isopropyl alcohol or similar
- Seal fitting tool

## Other Kilargo Architectural Seals include:

- Door Perimeter Seals
- Door Bottom Seals
- Automatic Door Bottom Seals
- Threshold Plates
- Brush Seals
- Magnetic Seals

Contact your nearest Kilargo office for further details.

# *Installation detail: Meeting Stile*


- **Step 1** Remove the seal from the packaging and measure the glass panel height to determine the seal length required.
- **Step 2** Clean the edge of the glass panel using Isopropyl alcohol or similar to ensure it is free from oil, grease or dust. (This is most important)
- **Step 3** Using scissors / side cutter, trim the seal to the glass panel height.
- **Step 4** Use the seal fitting tool in order to ensure the seal is applied centred and straight to the glass panel edge. Progressively pull the backing tape off the seal while running the fitting tool down the glass panel edge.


### Important

Ensure that the installation of this product does not impede the opening or closing of the door.


#### Note

Recommendations as to methods for use of materials and construction details are based on the experience and knowledge of Kilargo and are given in good faith as a general guide and service to designers, contractors and manufacturers. Kilargo reserves the right to make alterations or delete any installation detail without prior notice.

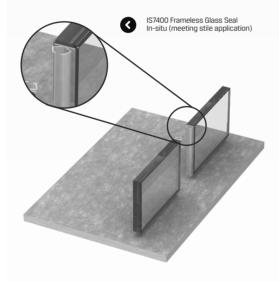

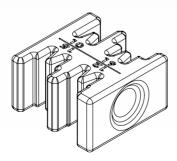

Seal fitting tool for 10, 12, 15 & 19mm glass door panels (meeting stile)

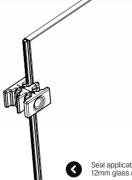

Seal application tool in-situ on a 12mm glass door panel

Literature Code: IS7400 05/20

