



## Installation Instructions: Air-Transfer

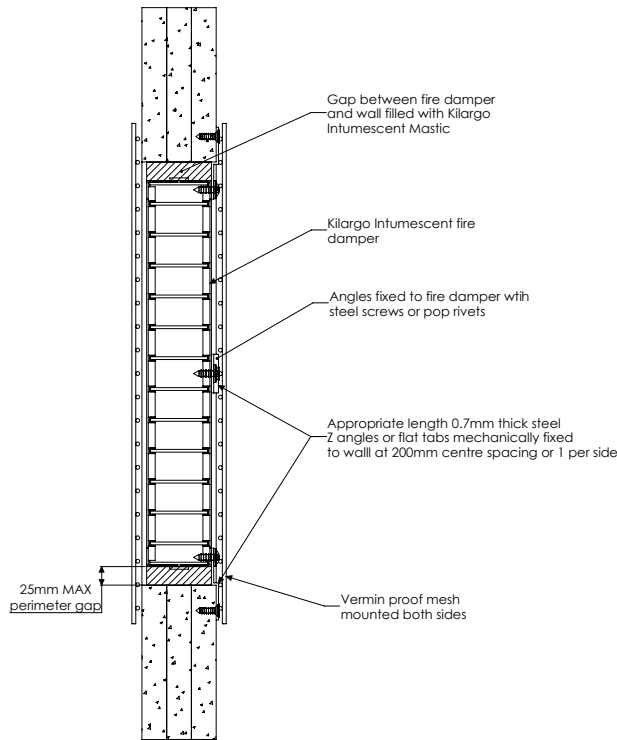

- |               |   |
|---------------|---|
| <b>Step 1</b> | Position damper centrally in penetration aperture as per system drawing with temporary supports or packers.   |
| <b>Step 2</b> | Fasten mounting angles or brackets to damper with steel self-drilling screws or steel pop rivets and to the building element with appropriate mechanical fixings as per system drawing. |
| <b>Step 3</b> | Apply Kilargo Intumescent Mastic (supplied separately) to the gaps between the damper & building element. Ensure fill depth corresponds with those detailed in the system drawing.      |
| <b>Step 4</b> | Ensure product and certification labels are in a prominent position for easy identification during subsequent maintenance inspections.  |
| <b>Step 5</b> | Fix grilles, louvres or vermin proof mesh independently to each side of the building element.   |

### System Notes

- Grilles, louvres, vermin proof mesh, angles, brackets & fixings are to be supplied by others.
- Grilles to be fixed independently to the building element and shall not be fixed to the fire damper.
- Kilargo Intumescent Fire Dampers shall be installed in accordance with this detail, including the use of Kilargo Intumescent Mastic and in accordance with the requirements of AS1682.2
- Ensure convenient access is provided for visual inspection and cleaning as necessary.
- 2mm Minimum gap allowable between damper and aperture. For gaps between 2-5mm, a fillet of Kilargo Intumescent Mastic shall be applied.

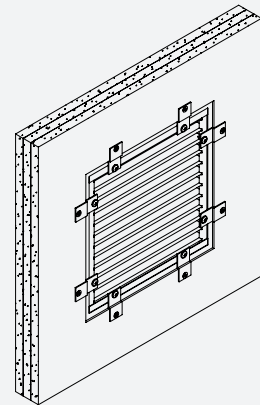


Building element:	FR Plasterboard 3 x 16
Application:	Cell only - Air Transfer with grilles or flat vermin proof mesh
Maximum size:	1200 x 1200
FRL	-/120/120
Test reference No.	FAS200229

**System No. WP2i (a)**


## Installation Instructions: Air-Transfer - Modular

Wall Mounted Systems

### U Channel

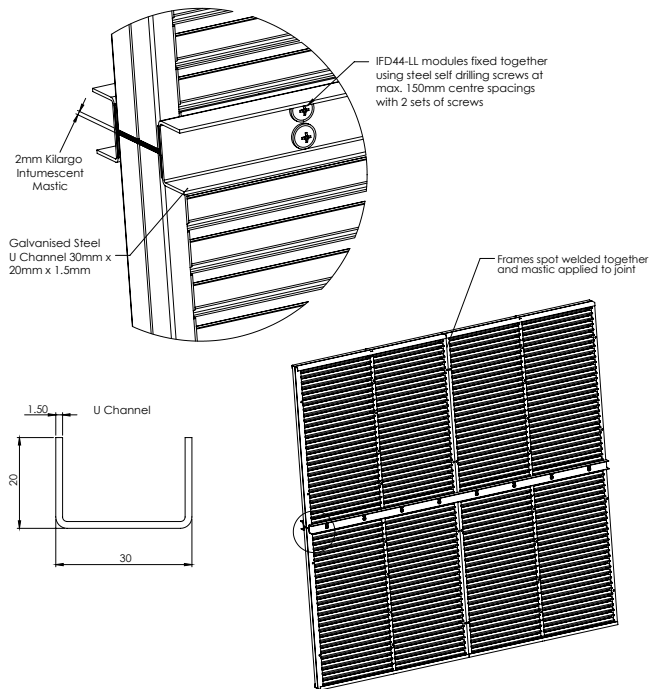


### Galvanised Plate

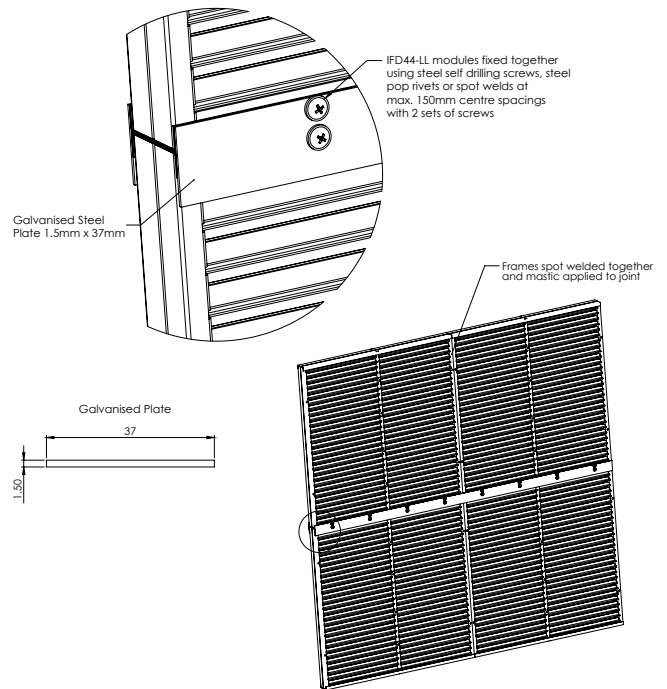

- Step 1** Apply Kilargo Intumescent Mastic to the opposing module.
- Step 2** Align and bring modules together and mechanically fix together using U channels and steel self-drilling screws or steel pop rivets with 2 sets of screws at 150mm centres as per the modular system drawing on both sides.
- Step 3** Fix modular damper to aperture or casing as shown in the appropriate system drawing and installation instructions.

### System Notes

- Fixings are to be supplied by others.
- Optional flat joining strips supplied at the time of order in lieu of U channel on request for air transfer systems only.

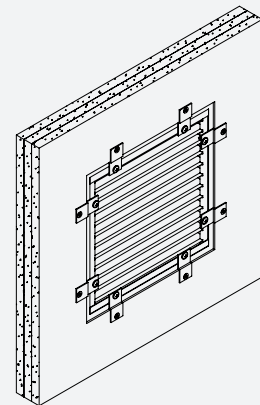

Building element:	FR Plasterboard 3 x 16
Application:	Cell only - Air Transfer with grilles or flat vermin proof mesh
Maximum size:	1200 x 1200
FRL	-/120/120
Test reference No.	FAS200229

*Note: To be read in conjunction with system WP2i (a)*

**System No. WP2i (b)**