


Installation Instructions

Single & Modular units in masonry wall with no casing

1. Depending upon fixing bracket chosen, fasten mounting Angle Tab or Z brackets to one side of damper with steel self drilling screws or steel pop rivets.
2. Position damper centrally in penetration aperture as per System Drawing.
3. Fix mounting Angle Tab or Z bracket to wall aperture using masonry anchors (supplied by others).
4. Fire-stop any gaps between the damper & building element with Kilargo Intumescent Mastic (supplied separately). Ensure fill depth corresponds with those detailed in the System Drawing.
5. If connecting ductwork to wall ensure that an appropriate AS1682.2 compliant breakaway joint method is used.
6. Ensure product and certification labels are in a prominent position for easy identification during subsequent maintenance inspections.
7. Ensure convenient access is provided for visual inspection and cleaning as necessary.

Notes

1. Product must be fitted in accordance with this detail, including the use of Kilargo Intumescent Mastic to ensure compliance with Kilargo Fire Test Approval detailed.
2. Fixing screws, brackets and anchors are to be supplied by others.

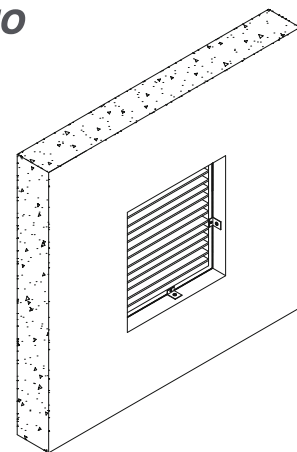

Building Element	Masonry
Application	No casing with various fixing brackets
Maximum Size	600mm x >10m
FRL	-/120/-
Test Reference No.	CSIRO FC01854, FC02512

System No. **WM11**