


## Installation Instructions


IFD44 with no casing penetrating a concrete floor slab


- Assemble damper modules by applying Kilargo Intumescent
  Mastic to mating channel. Align and bring units together so
  that they interlock and mechanically fix together with steel self
  drilling screws or steel pop rivets at 150mm centres.
- **2.** Position & fasten supporting angles to top face of module using steel screws as detailed in the System Drawing.
- 3. Position the damper module in the aperture and mechanically fix the angle brackets to the slab using masonry anchors Fire stop any gaps between the damper and slab with Kilargo Intumescent Mastic (supplied separately). Ensure fill depth corresponds with those detailed in the System Drawing. Note: A maximum perimeter clearance of 25mm applies.
- **4.** If connecting ductwork to slab ensure that an appropriate AS1682.2 compliant breakaway joint method is used.
- 5. If ductwork is not connected; To prevent injury a load bearing grate is required (by others) in situations where installation is exposed or damper may be accessed by foot traffic.
- **6.** Ensure convenient access is provided for visual inspection and cleaning as necessary.
- 7. Ensure product and certification labels are in a prominent position for easy identification during subsequent maintenance inspections.

## Notes

- Product must be fitted in accordance with this detail, including the use of Kilargo Intumescent Mastic to ensure compliance with Kilargo Fire Test Approval detailed.
- 2. Retaining angles, fixing screws masonry anchors and load bearing grate are to be supplied by others.

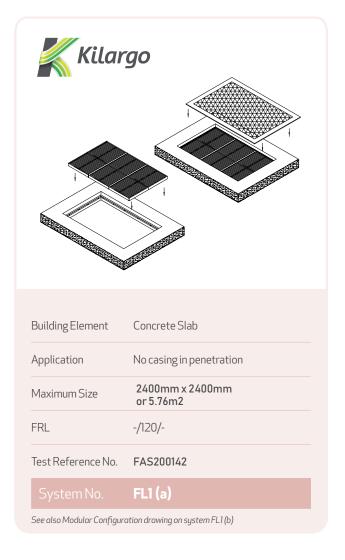

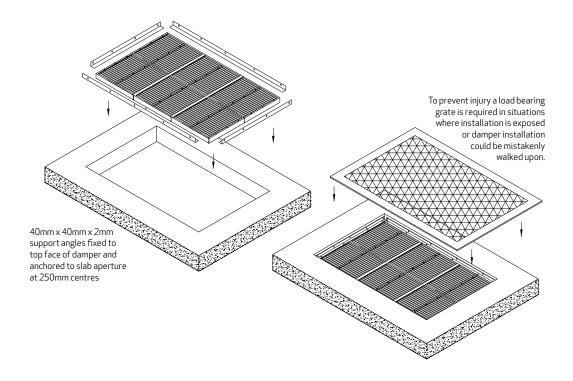

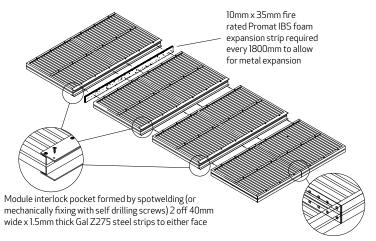

Adjoining damper cell frames mechanically stitched together with spotwelds at 60mm centres



Building Element	Concrete Slab
Application	No casing in penetration
Maximum Size	2400mm x 2400mm or 5.76m2
FRL	-/120/-
Test Reference No.	FAS200142
System No.	FL1 (b)
To be read in conjunction with system FL1 (a)	