

Fitting Instructions: Flexible Self Adhesive Fire Seal



Length:

Description of contents

- Flexible fire seal with self-adhesive backing
- Fitting instructions

Tools required for installation

- Tape Measure
- Pencil or marker
- Knife / scissors

Other Kilargo Architectural Seals include:

- Door Perimeter Seals
- Door Bottom Seals
- Automatic Door Bottom Seals
- Threshold Plates
- Brush Seals
- Magnetic Seals

Contact your nearest Kilargo office for further details.

Installation detail: Flexible self-adhesive fire seal

The KG1602 Seal requires a minimum of 2mm clearance between the door and frame.

- Step 1** Remove the seal from the packaging and measure the existing head (top) and jambs (sides) of the door frame to determine the seal length required.
- Step 2** Clean the frame using Isopropyl alcohol or similar to ensure it is free from oil, grease or dust and if painted, well cured. (This is most important)
- Step 3** Using scissors/knife, trim the seal to length.
- Step 4** Starting with the long vertical jambs, peel back the self-adhesive backing tape by approximately 150mm.
- Step 5** Ensuring the seal is correctly positioned press firmly to door frame.
- Step 6** Progressively pull the backing tape off the seal while running a finger or appropriate blunt tool down the centre of the profile whilst ensuring that the adhesive sticks evenly.
- Step 7** Once the seals have been fitted to the jambs. Apply the seal to the head of the frame as per step 6.
- Step 8** If required, cut intumescent part of seal around striker plate to ensure proper closing and latching of the door assembly.

Note

It should be noted that in certain applications adhesion may be compromised if frames have been treated with proprietary anti-graffiti paint systems.

Recommendations as to methods for use of materials and construction details are based on the experience and knowledge of Kilargo and are given in good faith as a general guide and service to designers, contractors and manufacturers.


Kilargo reserves the right to make alterations or delete any installation detail without prior notice.

Important

Do not remove and relocate seal. Do not stretch the seal.

Ensure that the installation of this product does not impede the opening or closing of the door. It is recommended to check the adjustment of the door seal periodically to ensure the door assembly to which it is fitted, closes and latches properly.

The seal may be cleaned periodically without removing the door leaf from its frame.

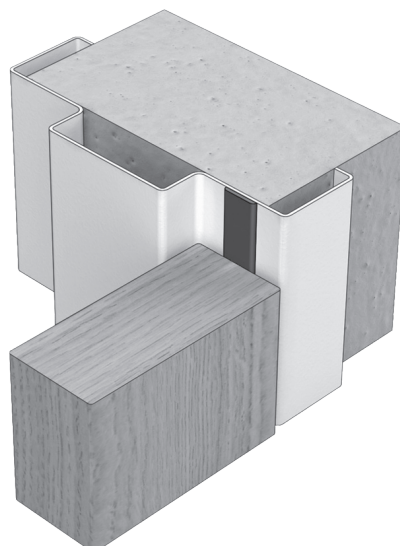

Literature Code: KG1602 06/17